

are 4 active alarms

Search for ISO code, MDI command

DI (Manual Data Input)

Unit 1

GOTO	ERR
+ 0.000	+ 0.001
+ 0.000	+ 0.000
+ 0.000	+ 0.000
+ 0.000	+ 0.000

**Favourites**

General

Send command Iso

M180

General

Restore

General

Park

Parking Right X+

P

MACHINE IN WORKING CONDITION AND DOOR CLOSE

by pass the safety! (MOVE THE HEAD AWAY)

Machine parts > Tools magazine > Tool change Fast

Tool change In/Out

In

IN is OUT →

OPEN THE DOOR

100% 0.0 m/min

100%

0rpm

! ⚙️